INSTRUCTIONS OF ULTRASONIC CLEANER

UC-0609

OWNER'S MANUAL

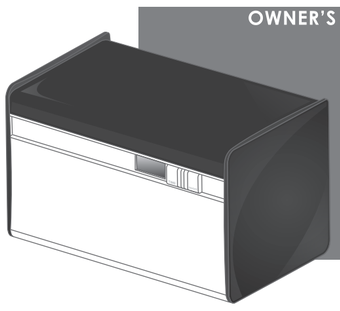

Thank you for your purchase of this new SUNPENTOWN product.
Please read thoroughly and retain this manual for future references.

CAUTION:

1. This appliance is intended for household only.
2. Never operate this unit if the cord is damaged. In case of damage, cord must be replaced by the manufacturer, an authorized service agency or a similarly qualified electrician.
3. Close supervision is necessary when this item is used by or near children.
4. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety.

READ ALL INSTRUCTIONS BEFORE USING

DANGER – To reduce the risk of electrocution:

1. Always unplug this product immediately after using.
2. Do not use while bathing.
3. Do not place or store product where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for a product that has fallen into water. Unplug immediately.

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons.

1. A product should never be left unattended when plugged in.
2. Close supervision is necessary when this product is used by, on, or near children or invalids.
3. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never block the air openings of the product or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping or drowsy.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Unplug this product before filling. Fill (reservoir) with water only unless otherwise specified by manufacturer. Do not overfill (or specify filling instructions).

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USE.

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and personal injuries. The basic precautions include the following:

1. Place Ultrasonic Cleaner on a firm, flat and level surface. The Ultrasonic Cleaner may not work properly on an uneven surface.
2. Keep Ultrasonic Cleaner away from the reach of children.
3. Do not place the Ultrasonic Cleaner near any heat sources, such as stoves, radiators and heaters; or in very humid or freezing areas.
4. Do not move the Ultrasonic Cleaner while it is operating. Unplug and empty the water tank before moving.
5. Do not overload or place heavy items in Ultrasonic Cleaner.
6. Do not immerse any part of the appliance in water or other liquid.
7. Clean the Ultrasonic Cleaner as needed.
8. BEFORE using the Ultrasonic Cleaner, check the power cord for any signs of damage. If the cord is found damaged, DO NOT use the Ultrasonic Cleaner and return it to the manufacturer for repair.
9. Plug the Ultrasonic Cleaner into a 120V AC power outlet. Never pull the plug by the cord.
10. A loose fit between the AC outlet and plug may cause overheating and distortion of the plug. Contact a qualified electrician to replace the loose or worn outlet.
11. Never operate the Ultrasonic Cleaner without water in the tank.
12. Never use sharp tools to clean water tank as this may damage inner surface of tank.
13. Avoid using strong acid or alkaline as cleaning solutions.
14. When changing cleaning solutions, avoid big differences in water temperature in order to prevent damage to water tank.
15. Keep the water temperature below 158 degrees when operating for a long period of time.
16. Clean the surface of the machine with a soft cloth. Never use gasoline or other cleaning solutions.
17. Unplug unit from the power outlet after each use.

PART LIST

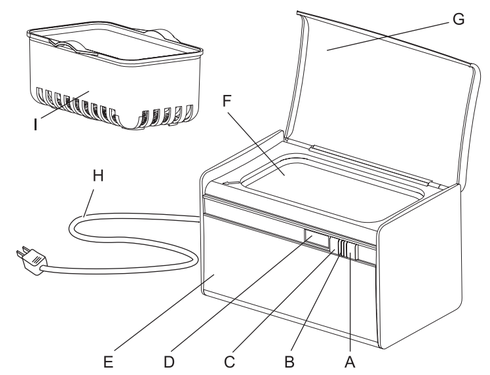

A. "ON/OFF" power switch
B. Power indicator
C. "TIME"—Timer setting button (1-9 minutes)
D. LCD timer display
E. Fireproofed plastic housing
F. Stainless steel water tank
G. Semitransparent plastic cover
H. Power cord (59 inches)
I. Water tank basket

OPERATION

1. Fill up water tank with water to about 70% or 80% of capacity (objects to be cleaned must be completely submerged).
2. Plug the power cord into a 120V AC power outlet. The LCD display will show 00:00.
3. Immerse the objects to be cleaned into water tank or hold it suspended in water by clamps or tongs.
4. Press the "TIME" button to set the desired working time (minutes). The setting range is from 0 minute to 9 minutes. The interval is one minute.
5. Press the "ON/OFF" button to turn on the Ultrasonic Cleaner. And it will run till the setting time runs up.

Please note: if the timer setting is 00:00, the cleaner cannot be turned on.

6. The cleaner can be manually stopped at any time by simply press the "ON/OFF" button. The timer setting cannot be changed when the cleaner is operating. To change the setting, turn off the cleaner first and set the timer again.

Please note: Do not operate the cleaner continuously for more than one hour.

APPLICATIONS

Here is a list of objects that can be cleaned with the Ultrasonic Cleaner:
Spectacles, watches, jewelry, glass items, toothbrushes, dentures, razor blades, machine nozzles, pendants, etc.

You may apply some detergents to help clean the objects. However, do not use any strong corrosive detergents that could corrode the objects with or without the ultrasonic waves.

MAINTENANCE

Clean the Ultrasonic Cleaner regularly with a soft damp cloth. Do not immerse any part of the appliance in water or other liquid. Do not use solvents such as gasoline, benzene, paint-thinner, or other abrasive-type cleaner.

TECHNICAL SPECIFICATIONS

Model	UC-0609
Unit Dimension	7.87 x 4.8 x 4.76
Water Tank Dimension	5.83 x 3.15 x 2.17
Water Tank Capacity	1.27 pint (2.5 cups)
Water Tank Material	Stainless Steel SUS 304
Operating Frequency	46KHz
Power Consumption	35W
Power Input	120V 60Hz

YOUR GUARANTEE

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:
- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:
- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

SUNPENTOWN INTERNATIONAL INC.
21415 Baker Parkway, City of Industry, CA 91789-5236
Tel: 909-468-5288 • Fax: 909-468-5279
service@sunpentown.com
www.sunpentown.com